

Audi symphony Sound System

Operating Manual

© 2006 AUDI AG

AUDI AG works continuously to develop and further improve all models. You will appreciate that we must therefore reserve the right to alter any part of the vehicle and its equipment or technical specifications at any time. No legal commitment can therefore be implied by the information, illustrations or descriptions in this Manual.

No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Printed in Germany.

Date of publication: 17.02.2006



Note

This Operating Manual is only valid in conjunction with the Owner's Manual for your vehicle.



For the sake of the environment

This paper was bleached without use of chlorine.

Foreword

Thank you for choosing an Audi Sound System.

Your sound system incorporates the latest technology and infotainment functions. All settings can be made by selecting options in a simple and user-friendly menu structure.

We recommend that you read this Operating Manual carefully so that you quickly become familiar with all the available functions of the system and can take full advantage of them in everyday use.

Should you have any further questions regarding the Audi Sound System in your car, please contact your Audi dealer.

We wish you safe and enjoyable motoring with your Audi.

AUDI AG

Contents

Notes about this Operating Manual	3	Media drives	13	Multi-function steering wheel	33
Overview	5	Internal CD changer	13	Introduction	33
Controls	5	External CD changer	15	Radio mode	33
Notes on traffic safety	5	General notes on the use of CD players	16	CD mode	34
Cleaning and care	6	CD	18	Telephone mode	34
General operating instructions	7	Selecting a CD in the internal CD changer	18	Index	36
Switching on and off	7	Selecting a CD in the external CD changer	18		
Adjusting the volume	7	Selecting an MP3 directory (BROWSE)	18		
Adjusting the tone	7	Selecting a track	19		
Radio	9	Fast forward/rewind	19		
Selecting a waveband	9	Shuffle (MIX)	19		
Tuning to a station	9	Scanning CD tracks	20		
Storing stations	9	Playing from an external audio source (AUX)	20		
Tuning to a stored station	10	Phone pre-installation ..	21		
Alternative frequency	10	Introduction	21		
Regional stations	10	Setting up	22		
Traffic Programme (TP)	10	Speech control system	25		
Traffic Information Messages (TIM)	11	Speech control system for some export markets	31		

Notes about this Operating Manual

This Operating Manual contains important information, tips, suggestions and warnings.

Please ensure that this Operating Manual is always kept in the vehicle. It should always be available to anyone else driving the vehicle, i.e. anyone renting, borrowing or buying the vehicle from you.

This manual describes **the equipment available for the vehicle at the time of going to print**. Some of the equipment described here will not be available until a later date, or may only be available in certain markets.

Some sections of this Operating Manual do not apply to all vehicles. If this is the case, a text at the start of the section indicates which vehicles it applies to, e. g. "Applies to vehicles: with external CD changer". This optional equipment is also marked with an asterisk **"*"**.

Illustrations are intended as a general guide, and may vary from the equipment fitted in your vehicle in some details.

At the beginning of this Operating Manual, you will find a **table of contents** showing all the items described in this manual in the order in which they appear. An **alphabetical index** is included at the end of the Operating Manual.

All references to **positions** such as "left", "right", "front" or "rear" are given as seen facing in the direction of travel.

* optional equipment

► The section is continued on the following page.

■ Denotes the **end of a section**.

® Registered trademarks are marked ®. However, the absence of this symbol does not constitute a waiver of the rights concerning any proprietary name.

⇒ ⚠ Refers to a "WARNING" within the same section. If the WARNING symbol is followed by a page number the warning text referred to is included in a different section.



WARNING

Texts with this symbol contain safety information. They warn you of serious dangers, possibly involving accident or injury.



Caution

Texts with this symbol draw your attention to a possible risk of damage to your vehicle.



For the sake of the environment

Texts with this symbol refer to points relevant to the protection of the environment.



Note

Texts with this symbol contain additional information of a more general nature. ■



Fig. 1 Audi symphony Sound System

Overview

Controls

This overview will help you to quickly familiarise yourself with the controls and displays.

①	ON/OFF button	
	– Switching on and off	7
	– Adjusting volume	7
	– Mute	7
②	Control buttons	
	– The function of the control buttons is indicated in the display and depends on which mode is currently active. For example, press the top left control button to tune the radio to BAYERN 3 .	
③	CD eject button	14
④	LOAD button: Loading a CD into the internal CD player	13
⑤	Display	
⑥	CD slot	
⑦	Forward/ reverse buttons	
	– In radio mode: Tuning to next/previous station	
	– In CD mode: Selecting next/previous CD track	
⑧	Rotary pushbutton	
	– Press the rotary pushbutton to scan radio stations/CD tracks	
	– Turn the rotary pushbutton: The function of the rotary pushbutton depends on which mode is currently active.	
⑨	Function selector buttons	
	– FM button: Selecting FM (VHF) waveband	9
	– AM button: Selecting AM (MW) waveband	9

– CD button: Activating CD mode	18
– TIM button: Calling up recorded traffic reports ...	11
– TP button: Activating/deactivating the Traffic Programme	10
– MENU button: Changing the sound system settings	7
– TONE button: Adjusting the tone	7
– AS button: Autostore (stores six stations with good reception)	9



Note

- Please note that only the Audi Sound System and its components are described in this Operating Manual. For more information about the features and equipment fitted on your vehicle, please refer to your Owner's Manual.
- Many of the functions on your sound system can also be operated using the multi-function steering wheel* ⇒ [page 33](#). ■

Notes on traffic safety

If you operate the sound system while driving, please consider the current traffic situation and always be prepared to stop operating the system in the interests of road safety. When driving, make use of the multi-function steering wheel* ⇒ [page 33](#) whenever possible.



WARNING

- **Today's driving conditions require your full attention. As the driver, you have full responsibility for traffic safety. For this reason, only operate the Audi Sound System when the traffic conditions**

 WARNING (continued)

allow you to do so safely and when you can maintain proper control of your vehicle - risk of injury.

- The volume of the audio sources (radio, CD player, etc.) should only be set at a level which enables you to hear distant police and emergency vehicles clearly - failure to do so could result in an accident.
- Please heed laws regulating the use of telephones in vehicles. ■

Cleaning and care

Cleaning the display

- Use a soft, clean cloth and an LCD cleaner to clean the display.

Cleaning the controls

- First clean the controls with a fine brush to remove dust.
- Then lightly moisten a clean, soft cloth and wipe the controls carefully.



Caution

Please take care not to damage the display. It can be dented by excessive finger pressure and scratched by sharp objects.



Caution

CD player cleaning disks can damage the media drives.

- Do not use a CD player cleaning disk to clean the media drives. ■

General operating instructions

Switching on and off

- Briefly press the ON/OFF button to switch the sound system on. You will then hear the audio source last used.
- Press and hold the ON/OFF button to switch the sound system off.

The sound system will automatically be activated **when the ignition is switched on**. It will also automatically switch off **when the ignition key is removed**.

If the sound system is **switched on** manually while the ignition key is removed, it will remain activated for about 60 minutes.

If the sound system was **switched off** manually, it will *not* be switched on again automatically when the ignition is switched on. ■

Adjusting the volume

Increasing and reducing the volume

- Turn the ON/OFF button clockwise or anti-clockwise.

Mute function

- Briefly press the ON/OFF button. The volume for the activated audio source will then be switched off. A crossed-out loudspeaker symbol will appear in the display.
- To restore the volume, briefly press the ON/OFF button or
- Turn the ON/OFF button clockwise.

When you switch on the system, excessive volume levels are reduced automatically to a preset level ⇒ *page 8*. ■

Adjusting the tone

Tone and balance

You can adjust the tone (BASS, MIDDLE, TREBLE), the left/right balance (BALANCE) and the front/rear balance (FADER).



Fig. 2 Tone menu

- Press the **(TONE)** button. The tone menu appears in the display ⇒ *fig. 2*.
- Press the control button assigned to the particular setting you wish to adjust. A bar will appear in the display.
- Turn the rotary pushbutton clockwise or anti-clockwise to adjust the tone or balance.
- Press the **(TONE)** button to exit the menu. Your settings will be stored. ■

GALA

GALA is the speed-dependent volume control function.

- Press the **(MENU)** button. The Setup menu appears in the display. ▶

- Press the **GALA** control button.
- If your vehicle is equipped with DSP BOSE, turn the rotary pushbutton to **OFF** and press it to open the menu.
- Turn the rotary pushbutton anti-clockwise if you want the volume to be raised only slightly as the speed of the vehicle increases.
- Turn the rotary pushbutton clockwise if you want the volume to be raised more intensely as the speed of the vehicle increases.
- Press the **(MENU)** button to exit the menu. Your settings will be stored. ■

Applies to vehicles: with DSP BOSE

AudioPilot™

The AudioPilot™ automatically adjusts the volume according to the noise level in the interior of the vehicle.

- Press the **(MENU)** button. The Setup menu appears in the display.
- Press the **GALA** control button.
- Turn the rotary pushbutton to **AUTO** and press to confirm.
- Press the **(MENU)** button to exit the menu. Your settings will be stored. ■

ON volume (VOL-ON)

When you switch on the system, excessive volume levels are reduced automatically to a preset level.

- Press the **(MENU)** button. The Setup menu appears in the display.
- Press the control button for **VOL-ON**.
- Turn the rotary pushbutton clockwise or anti-clockwise.
- Press the **(MENU)** button to exit the menu. Your settings will be stored. ■

Radio

Selecting a waveband

The radio has two wavebands: FM (VHF) and AM (medium wave). Each waveband has three memories (FM1, FM2, FM AS and AM1, AM2, AM AS).



Fig. 3 Radio

- Press the **[FM]** or **[AM]** button. The waveband/name of the station you have selected ① and the memory ② appear in the display.
- Press the **[FM]** or **[AM]** button again to switch between the memories. ■

Tuning to a station

You can tune the radio straight to the next station or set the frequency of a station manually. The SCAN function plays all the stations currently within reception range for a few seconds at a time.

Important: A waveband must be selected first ⇒ page 9.

Tuning to the next available station

- Press the forward or reverse button.

Setting the frequency manually

- Turn the rotary pushbutton clockwise or anti-clockwise.

SCAN

- Press the rotary pushbutton. The radio will play each available station for a few seconds. **SCAN** will appear in the display.
- Press the rotary pushbutton again to select the station currently playing.



Note

If the Traffic Programme function is activated ⇒ page 10, only traffic report stations will be available when you are tuning within the FM waveband. ■

Storing stations

You can store the selected station at any position in the memory. The Autostore function (AS) stores six stations with good reception in the third memory.

Storing a single station

- Press the **[FM]** or **[AM]** button one or more times to select the waveband and memory.
- Tune to a station ⇒ page 9.
- Press and hold one of the control buttons until you hear a tone. The station will be stored at that memory position.

Autostore (AS)

- Press and hold the **[AS]** button until **STORE** appears in the display. Six stations with good reception will be stored in the third memory of the current waveband (**FM AS** or **AM AS**).



Note

It is best to use the first two memories when storing a single station. The third memory is automatically filled by the Autostore function (AS). ■

Tuning to a stored station

You can tune the radio to a station stored manually or automatically.

Important: At least one station must have been stored beforehand.

- Press the **[FM]** or **[AM]** button one or more times to select the waveband and memory. The stations stored in each memory will appear in the display ⇒ *page 9*, fig. 3.
- To tune to one of the stored stations, press the control button assigned to that station (e.g. top left control button for **Bayern3**). ■

Alternative frequency

If the reception of a stored station is poor or the station cannot be received at all, the radio will automatically find an alternative frequency for that station.

- Press the **[MENU]** button.

- Press the **RDS-AF** control button.
- Turn the rotary pushbutton to **ON** to activate the alternative frequency function.
- Turn the rotary pushbutton to **OFF** to deactivate the alternative frequency function.
- Press the **[MENU]** button to exit the menu. ■

Regional stations

Some FM stations broadcast different regional programmes under the same name.

- Press the **[MENU]** button.
- Press the **RDS-REG** control button.
- Turn the rotary pushbutton to **AUTO** if you wish to re-tune automatically to regional broadcasts. The radio will tune to the regional station with the best reception.
- Turn the rotary pushbutton to **OFF** to prevent the radio from re-tuning to regional broadcasts.
- Press the **[MENU]** button to exit the menu. ■

Traffic Programme (TP)

Traffic announcements broadcast by FM stations are played even if you are listening to an AM station or a CD.

Switching on the Traffic Programme

- Press the **[TP]** button. **TP** will appear in the display. You will then hear the latest traffic announcements when they are broadcast. ►

Interrupting a traffic announcement

- Press the **(TP)** button. The current traffic announcement will be interrupted. The Traffic Programme will remain active.

Adjusting the volume for traffic announcements

- Turn the ON/OFF button clockwise or anti-clockwise during a traffic announcement. The volume for traffic announcements will be stored. The volume for radio and CD mode will not be changed.

Switching off the Traffic Programme

- Press the **(TP)** button.

What happens when the selected traffic report station can no longer be received?

- If you are tuned to the FM waveband you will hear a tone and **NO TP** will appear in the display for a few seconds. Tune to another station manually ⇒ *page 9*.
- If you are tuned to the AM waveband a new traffic report station will be selected automatically.

If no traffic report stations can be received, **NO TP** will appear in the display.



Note

If the Traffic Programme function is activated, only traffic report stations will be available when you are tuning within the FM waveband. ■

Traffic Information Messages (TIM)

Traffic announcements are recorded while the Traffic Programme function is active and can be played back later.

Important: The Traffic Programme function must be switched on ⇒ *page 10*.

Playing back a traffic announcement

- Press the **(TIM)** button. The recorded traffic announcements will be played back. The display will show the time at which the traffic announcement was broadcast. If more than one traffic announcement has been recorded, the display will show e.g. **2/3** (i.e. the second of a total of three traffic announcements).
- Press the forward/reverse button to jump to the next/previous traffic announcement.

Setting a recording time for traffic announcements

- Press and hold the **(TIM)** button until **TIM** appears in the display.
- Press the **TIMER1** or **TIMER2** control button.
- If the selected timer is not active, turn the rotary pushbutton to **ON**.
- To enter the hour, press the control button for **SET HOUR** and turn the rotary pushbutton clockwise or anti-clockwise.
- To enter the minutes, press the control button for **SET MIN** and turn the rotary pushbutton clockwise or anti-clockwise.



- Confirm your entry by pressing the control button for **ENTER**. Incoming traffic announcements are recorded for 90 minutes before and 30 minutes after the set time.

Switching off the timer

- Press and hold the **TIM** button until **TIM** appears in the display.
- Press the **TIMER1** or **TIMER2** control button.
- Turn the rotary pushbutton to **OFF** to switch off the timer.

The sound system stores up to nine traffic announcements. The tenth traffic announcement will overwrite the oldest traffic announcement. If a traffic announcement lasts for longer than four minutes, the end of the announcement will be recorded over the start. The sound system will continue to record traffic announcements for two hours after you switch it off. No traffic announcements will be recorded if you do not use your vehicle for three days or more. ■

Media drives

Internal CD changer

General notes

The sound system has an internal CD changer. You can load standard audio CDs or MP3 CDs into the CD changer.

Use the CD function to play back a CD which is already loaded in the player ⇒ *page 18*. To switch between the internal and external CD changer*, press the **[CD]** button repeatedly ⇒ *page 18*.

For important notes regarding the use of the different storage media, please refer to ⇒ *page 16*.

MP3 files must meet the following specifications:

Format	MPEG-1 Layer 3
Standard	ISO 9660 Level 2
File system	Joliet (single session and multisession)
Bit rates	64 to 256 kbit/s and variable bit rate
No. of files	Max. 512 files per medium, max. 255 files per directory
No. of directories	Max. 255 directories with max. 8 subdirectories
ID3 tags	Version 1, 2.3 and 2.4, max. 32 characters
Supported media	CD-ROM, CD-R, CD-RW with a capacity of 650 MB and 700 MB

Various items of information can be stored on an MP3 CD. The following information appears in the display:

- File name of the MP3 file currently playing (**FILE**).

- Directory or **FOLDER** on the MP3 CD containing the track which is currently playing. The top level is automatically given the name **ROOT**.

- Name of the **ALBUM**

- Name of the **ARTIST**

- **CD TITLE**. Titles which are too long are displayed with "...". To see the full title, press the control button assigned to the title.

To switch between the above categories, press the **INFO** control button repeatedly.

The display will show **NOT AVAILABLE** for a few seconds if no information is stored on the MP3 CD for one of the categories. ■

Loading CDs into the CD changer

You can load up to 6 CDs into the CD changer.

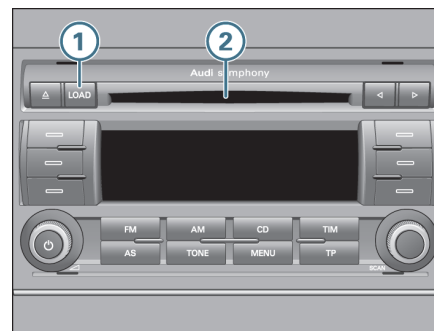 


Fig. 4 Loading CDs

Do not use any force when inserting a CD into the drive. The CD will be drawn into the slot automatically. ►

Loading a CD

- Press the **LOAD** button ①. **LOAD CD: SELECT** will appear in the display.
- Press one of the control buttons **1** to **6** to choose the position at which you want to load the CD. **LOAD CD: WAIT** will appear in the display. If you do not choose a specific position, the CD will automatically be loaded into the next available position in the CD changer.
- As soon as **LOAD CD: INSERT** appears in the display, hold the CD straight with the text facing upwards and insert it into the CD slot ②. The CD will be pulled in automatically.

Loading several CDs

- Press and hold the **LOAD** button ① until **LOAD ALL: WAIT** appears in the display.
- As soon as **LOAD ALL: INSERT** appears in the display, insert the CDs into the CD slot ② one after the other holding them straight with the text facing upwards.

Ejecting CDs from the CD changer

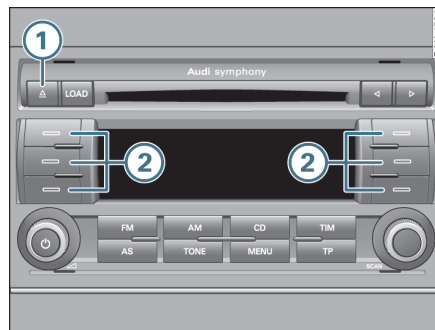 


Fig. 5 Ejecting CD

Ejecting a CD

- Press the eject button ①. **EJECT CD: SELECT** will appear in the display.
- Press the control button ② for the CD you want to eject.

Ejecting all CDs

- Press and hold the CD eject button ① until **EJECT ALL: WAIT** appears in the display. All of the CDs are ejected one after the other.

Press the CD eject button again if you want to stop ejecting the CDs.

After it has been ejected, the CD will automatically be pulled back into the CD player after about 30 seconds if it is not removed from the CD slot.



Note

Please observe the notes for handling CDs ⇒ page 16. ■

External CD changer

General notes

The CD changer is located in the glove box. You can load audio CDs into the CD changer.

Use the CD function to play back a CD which is already loaded in the player ⇒ *page 18*. To switch to the external CD changer*, press the **CD** button repeatedly ⇒ *page 18*.

For important notes regarding the use of the different storage media, please refer to ⇒ *page 16*. ■

Applies to vehicles: with external CD changer

Loading CDs into the CD changer

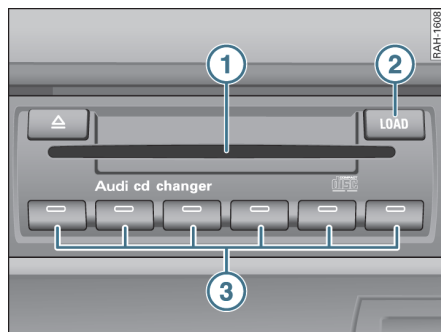 


Fig. 6 Loading CDs

Do not use any force when inserting a CD into the drive. The CD will be drawn into the slot automatically.

Loading a CD

- Press the **LOAD** button ② ⇒ fig. 6. When the CD changer is ready for loading, red diodes (not seen in illustration) will light up in the CD slot ①.
- Insert the CD (text facing upwards) into the CD slot ①. The CD will automatically be loaded into the next available position in the CD changer. The diode light in the corresponding button ③ will stop flashing.

Loading all CDs

- Press and hold the **LOAD** button ② ⇒ fig. 6 for more than 2 seconds.
- Wait until the red diodes inside the CD slot ① begin flashing (not shown in illustration).
- Insert all the CDs into the CD slot ① holding them straight with the text facing upwards. The button diodes ③ for the occupied positions will stop flashing.

Loading a CD in a specific empty position

- Press the **LOAD** button ② ⇒ fig. 6. The button diodes ③ for any empty positions will begin flashing.
- To load a CD in a specific empty position, press any button ③ with a *flashing diode*.
- Wait until the red diodes inside the CD slot ① begin flashing (not shown in illustration).
- Insert the CD (text facing upwards) into the CD slot ①. ►

Loading a CD in a specific occupied position

- Press the **LOAD** button ② ⇒ *page 15*, fig. 6. The diodes in buttons ③ will be illuminated to indicate which positions are already loaded with a CD.
- Press any button which is illuminated but not flashing ③. The CD at that position will then be ejected.
- Remove the CD from the slot ①.
- Insert the CD that you wish to load (text facing upwards) into the slot ①, holding it straight.

If you press the **LOAD** button ⇒ *page 15*, fig. 6 while you are loading all CDs, the loading process will be cancelled.

After it has been ejected, the CD will automatically be pulled back into the CD changer after about 30 seconds if it is not removed from the CD slot. ■

Applies to vehicles: with external CD changer

Ejecting CDs from the CD changer

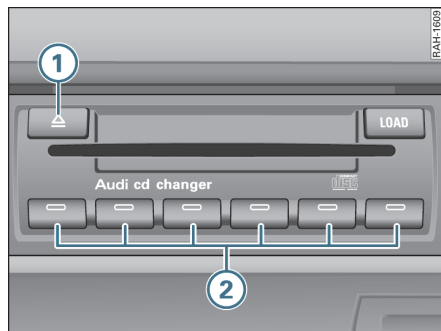 


Fig. 7 Ejecting CD

Ejecting a CD

- Press the CD eject button ① ⇒ fig. 7.
- Press one of the illuminated buttons ② to eject the corresponding CD from the CD changer, or
- Press the eject button ① again to eject the CD that is currently playing from the CD changer.

Ejecting all CDs

- Press and hold the CD eject button ① ⇒ fig. 7 for at least two seconds. All of the CDs are ejected one after the other.

After it has been ejected, the CD will automatically be pulled back into the CD changer after about 30 seconds if it is not removed from the CD slot.



Note

Please observe the notes for handling CDs ⇒ *page 16*. ■

General notes on the use of CD players

Use of laser equipment

Laser devices are divided into the safety classes 1 to 4, as specified by DIN IEC 76 (CO) 6/VDE 0837. The laser devices used on your vehicle are classified as safety class 1. Lasers used in devices that fall into this category are very weak and well screened, so there is no danger if used correctly.

Requirements for good sound reproduction

Please note the following in order to ensure perfect high-quality sound reproduction and avoid damage to media drives: ▶

- Do not use dirty CDs
- Do not use damaged or scratched CDs
- Do not use labels
- Do not use protective rings
- Do not use a CD cover or a stabiliser
- Do not use non-circular CDs (shape CDs)
- Do not use single CDs (diameter 8 mm / 3 inches)

Always store unused CDs in a suitable CD case and do not expose them to direct sunlight.

Cleaning media drives and CDs

Never use a CD player cleaning disk to clean the media drives.

Clean CDs with a soft lint-free cloth. Wipe the disc in a straight line from the centre outwards. If necessary, dirt can be removed with a commercially available CD cleaner or with isopropyl alcohol. Please never use petrol, paint thinner or record cleaner, as these can damage the CDs.

Read errors

If the display indicates a read error (**ERROR**, **CHECK CD** or **CD ERR**) any of the following causes are possible:

Problem	Remedy
CD is dirty.	Clean the CD.
CD is scratched.	Inspect the CD for scratches.
CD was inserted upside down.	Insert the CD with the text facing upwards.
Condensation has formed on the CD.	Wait until the device is dry.
A mechanical malfunction has occurred on the media drive.	Contact an Audi dealer or qualified workshop.

If **SERVICE** appears in the display, please contact an Audi dealer or qualified workshop.



Note

Never remove the device cover. The device has no components that can be serviced by the owner. ■

CD

Selecting a CD in the internal CD changer



Fig. 8 CDs in the internal CD changer

Important: A CD must have been inserted in the internal CD changer ⇒ *page 13*.

- Press the **[CD]** button. You will hear the CD which was playing last.
- To select a different CD in the internal CD changer, press the **CHANGER** control button followed by the control button for the CD.

The following information appears in the display:

- ① Playing time
- ② CD title¹⁾
- ③ Number of the track on the CD
- ④ Name of the directory/ album¹⁾ ■

¹⁾ Applies only to MP3 CDs ⇒ *page 13*.

Applies to vehicles: with external CD changer

Selecting a CD in the external CD changer



Fig. 9 CDs in external CD changer

Important: A CD must have been inserted in the external CD changer.

- Keep pressing the **[CD]** button until **CD EXT** appears in the display. You will hear the CD which was playing last.
- To select a different CD in the external CD changer, press the control button for the CD. ■

Selecting an MP3 directory (BROWSE)

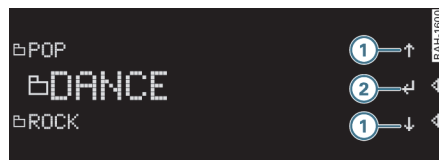 


Fig. 10 Selecting an MP3 directory



Fig. 11 Moving up an MP3 directory level

Important: You must have inserted an MP3 CD and selected CD mode.

Moving down a directory level

- Press the **BROWSE** control button.
- Keep pressing the control button for the up/down arrow ① until the desired directory appears in the middle of the display (e.g. **DANCE**).
- To change directory, press the control button for the left arrow ②.

Moving up a directory level

- Keep pressing the control button for the up/down arrow until “...” appears in the display.
- To change to the parent directory, press the control button for the left arrow ③. ■

Selecting a track

You can jump to the previous/next track on a CD.

- Press the forward or reverse button, or
- Turn the rotary pushbutton clockwise or anti-clockwise. The selected track will be played.



Note

A random track will be selected if the shuffle function is active
⇒ page 19. ■

Fast forward/rewind

You can fast forward and rewind within a track.

- Press and hold the forward or reverse button. The fast forward/rewind will start.
- Release the forward or reverse button to continue listening to the CD. ■

Shuffle (MIX)

When the shuffle function (MIX) is active, the tracks on one CD (CD), the tracks on all CDs (ALL) or the tracks in one folder (FOLDER) are played in random order.

- Press the **[MENU]** button. **SETUP** will appear in the display.
- Press the **MIX** control button.
- To activate the shuffle function, press the **FOLDER**, **CD** or **ALL** control button.
- To deactivate the shuffle function, press the **OFF** control button.
- Press the **[MENU]** button to exit the menu. ►

**Note**

If you switch on the shuffle function while the SCAN function is active, the SCAN function will be deactivated. ■

**Note**

The external audio source is operated from the connected device itself. ■

Scanning CD tracks

The SCAN function plays each track on the CD for a few seconds.

- Press the rotary pushbutton. **SCAN CD** appears in the display and the tracks on the CD are played for a few seconds.
- Press the rotary pushbutton to select the track currently playing.

**Note**

If you switch on the SCAN function while the shuffle function (MIX) is active, the shuffle function will be deactivated. ■

Playing from an external audio source (AUX)

Data from an external audio source can be played back on the sound system.

Important: An external audio source must be connected.

- Keep pressing the  button until **EXT. SOURCE** appears in the display.

Phone pre-installation

Applies to vehicles: with phone pre-installation

Introduction

A mobile phone is connected to the phone pre-installation and operated via the multi-function steering wheel or the speech control system.*

The phone interface is located either on the centre console or in the centre armrest. A special mobile phone adapter is needed in order to connect your mobile phone to this interface. Mobile phone adapters are available from Audi dealers or specialist retailers.

Your mobile phone is operated using the multi-function steering wheel* ⇒ page 33 or the speech control system ⇒ page 25. You can also use the talk button * on the mobile phone adapter to answer and end a call.

When you use your mobile phone in conjunction with the on-board phone system, call signals are sent and received via the integrated mobile phone aerial. This ensures good transmission quality and keeps the mobile phone battery charged.



WARNING

- Please note that persons should maintain a minimum distance of 15 cm from the aerial as prescribed by the certification regulations for mobile high frequency transmission devices.
- Please direct your full attention to the road at all times! As the driver, you have full responsibility for traffic safety. For this reason, you should only use the functions in a manner that allows you to maintain control of the vehicle in all situations - accident risk!



Caution

- Always obey the laws regulating the use of telephones in vehicles.

- Always switch off your telephone in areas where using mobile phones is prohibited.
- Switch off the telephone in all areas where there may be a risk of explosion. Remember that these areas may not always be adequately marked. Such places are filling stations, fuel and chemical storage facilities or transport vehicles and other places where fumes, chemicals (e.g. from leaking propane or fuel vapours in vehicles or buildings) or large quantities of dust particles (e.g. from flour or wood) could accumulate in the air. This warning also applies to all other places where you would normally switch off your engine.



Note

- In order to use the telephone functions, your mobile phone must be compatible with the phone pre-installation in the vehicle, and the functions must be supported by your service provider.
- The reception can be poor in covered areas, for example in tunnels or underground garages.
- You may find that some locations are not covered by your network provider. You will not be able to use the telephone in such cases.
- For up-to-date information on the phone pre-installation, please contact an Audi dealer. ■

Setting up

Applies to vehicles: with phone pre-installation

Removing and installing the mobile phone adapter

The mobile phone adapter is fitted to the top of the mounting unit.

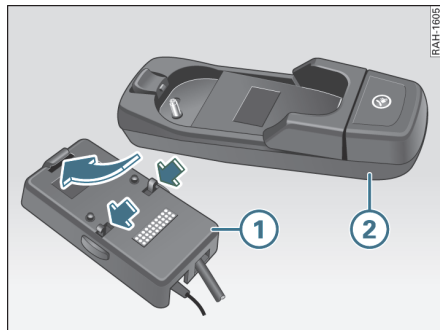 


Fig. 12 Installing the mobile phone adapter

Installing the mobile phone adapter

- Open the centre armrest (if applicable).
- Slide the lock on the mobile phone adapter ② ⇒ fig. 12 into the guide tab of the mounting unit ①.
- Push the bottom part of the mobile phone adapter ② down to make it engage.

Removing the mobile phone adapter

- Open the centre armrest (if applicable).
- If the mobile phone is in the adapter, take it out ⇒ page 22.

- Carefully pull the rear section of the adapter upwards out of the retainer.



Caution

To avoid damaging the adapter, you should only remove the mobile phone adapter when necessary.



Note

To avoid system malfunctions, ensure that the adapter unit is properly attached. ■

Applies to vehicles: with phone pre-installation

Inserting and removing the mobile phone



Fig. 13 Inserting the mobile phone into the phone adapter



Fig. 14 Removing the mobile phone from the phone adapter

Important: The mobile phone adapter must be installed
⇒ page 22

Inserting

- Place the mobile phone in the phone adapter ⇒ page 22, fig. 13.
- Press the mobile phone into the adapter until it locks into place. The mobile phone will be connected up to the mobile phone aerial and the battery will be charged.

Removing

- Press the release button **A** ⇒ fig. 14.
- Lift the mobile phone out.

Should you insert the mobile phone into the adapter or remove it during a call, the audio output or the connection may be interrupted. Removing the phone from the adapter during a telephone conversation can also cause the connection to be interrupted.

WARNING

Always make sure that the mobile phone is properly engaged. In the event of an accident, a mobile phone which is not securely fitted could be flung out of the adapter unit and injure the driver or passengers.

Caution

The mobile phone could possibly be damaged if it is not properly inserted in the adapter and falls out when driving.

Note

- If you use mobile phones in the vehicle this can generate electromagnetic fields.
 - For this reason, you should always operate mobile phones with an external aerial. This also applies to mobile phones used in Bluetooth mode. The external aerial directs the electromagnetic fields to the exterior, which reduces the field strength in the vehicle interior.
 - If retrofitting an external aerial, please ensure that it is installed correctly. ■

Applies to vehicles: with phone pre-installation

Bluetooth™

Bluetooth enables a wireless connection between a mobile phone and the on-board phone system.

The mobile phone ²⁾ must be linked with the on-board phone system. This has to be done only once with the vehicle stationary. To establish this link you must carry out various steps, depending on the mobile phone you are

²⁾ Please make sure that the mobile phone supports the handsfree profile.

using. After you switch on the ignition, you have 5 minutes to connect your mobile phone with the on-board phone system.

- Make sure that no other mobile phone is connected to the on-board phone system via Bluetooth.
- Switch on the ignition.
- Select the appropriate menu option on your mobile phone to search for Bluetooth compatible devices (i.e. the on-board phone system).
- Connect the mobile phone to the on-board phone system. Your on-board phone system will use the name “Audi UHV” when it connects with the mobile phone.
- Enter “1234” when the on-board phone system asks for the Bluetooth PIN.³⁾
- Wait until your mobile phone indicates that it has been successfully linked.

Up to four mobile phones

You can link up to four mobile phones to the on-board phone system. However, it is only possible to activate one connection at a time. If you link a fifth mobile phone to the on-board phone system, the system will cancel the link to the device which has not been used for the longest time in conjunction with the on-board phone system.

Connecting and disconnecting

A mobile phone which has been linked to the on-board phone system and is ready to operate will be detected automatically when

you switch on the ignition. On some mobile phones you have to confirm the connection.

The Bluetooth connection is terminated when the key is removed from the ignition lock. With most mobile phones the Bluetooth connection will also be terminated when you insert the mobile phone in the adapter.

Range

The Bluetooth connection between the mobile phone and the on-board phone system is restricted to the interior of the vehicle. The connection can be susceptible to interference caused by other electronic devices or obstacles between the devices. For example, the on-board system may have difficulty detecting your mobile phone or communicating with it if you keep it in your jacket pocket.



Note

- If you use mobile phones in the vehicle this can generate electromagnetic fields.
 - For this reason, you should always operate mobile phones with an external aerial. This also applies to mobile phones used in Bluetooth mode. The external aerial directs the electromagnetic fields to the exterior, which reduces the field strength in the vehicle interior.
 - If retrofitting an external aerial, please ensure that it is installed correctly. ■

³⁾ To prevent unauthorised use of your mobile phone we recommend that you have the Bluetooth PIN changed by an Audi workshop or other qualified workshop.

Applies to vehicles: with phone pre-installation

Phone book

The phone book entries on your SIM card and in your mobile phone directory are automatically stored in the on-board phone system and can be selected using the multi-function steering wheel.*

Loading the phone book entries

The phone book entries are automatically scanned into the memory of the on-board phone system after you have switched on the ignition and inserted the mobile phone in the adapter. It may take several minutes to load the entries, depending on how many entries are stored on the mobile phone. The message **Please wait** will appear in the driver information system display during this process.

Up to 500 entries from the four most recently loaded phone books can be saved. When you link a fifth mobile phone to the on-board phone system, the phone book entries from the mobile phone which has not been used for the longest time are deleted from the on-board system.

Using the mobile phone again later

If the SIM card is identical, the phone book entries are already stored in the on-board phone system. You can use the phone book immediately.

The system automatically checks the phone book entries in the background and will update the memory if the entries have changed. This process can take several minutes. If your vehicle is equipped with speech control* ⇒ *page 25* you cannot record any spoken names in the internal phone book while the SIM card entries are being loaded. ■

Speech control system

Applies to vehicles: with phone pre-installation and speech control system

Introduction

A dialogue system receives your speech commands and allows you to operate the mobile phone.

Functions

The speech control and hands-free system together enable you to operate the on-board phone system very conveniently. The speech control system recognises commands and digits spoken by different people.

The speech control system allows you to do the following:

- Create an internal phone book ⇒ *page 26*
- Enter and dial a telephone number ⇒ *page 29*

Traffic reports are not announced during a running dialogue. The dialogue will be ended immediately when an incoming phone call is received. To answer the call, press the left thumbwheel on the multi-function steering wheel* or the talk button  on the mobile phone adapter.

Controls

Two buttons are used to activate the speech control system:

- Talk button  on the multi-function steering wheel ⇒ *page 29*
- Talk button  on the mobile phone adapter ⇒ *page 27*.

An active dialogue can be terminated by pressing either of these two buttons.

Unclear speech commands

The system acknowledges your commands with a tone signal. If the system does not recognise a speech command, it will answer with **<Pardon?>** and request you to repeat the command. After a third failed attempt the system will answer with **<Cancel>** and the dialogue will be ended.



How to help the system understand you

- Speak clearly in a normal volume. Speak louder if you are driving fast.
- Speak in a normal tone without long pauses.
- Avoid speaking when the system is saying a cue.
- Close doors, windows and sun roof to reduce background noise. Make sure that passengers are not talking when you say a command.
- Keep the air outlets of the air distribution system pointed away from the microphone, which is fitted in the vicinity of the front interior lights.
- The system should only be operated by the driver, since the hands-free microphone is directed towards the driver.



WARNING

- **Please direct your full attention to the road at all times! As the driver, you have full responsibility for traffic safety. For this reason, you should only use the functions in a manner that allows you to maintain control of the vehicle in all situations - accident risk!**
- **The speech control system must not be used in cases of emergency, since the voice changes in stressful situations. This could result in a failed or delayed telephone connection. Always dial emergency numbers manually! ■**

Applies to vehicles: with phone pre-installation and speech control system

Internal phone book of the speech control system

Recorded names for phone book entries and independent names and numbers are stored in the internal phone memory.

Functions

The internal phone book has 50 memory positions. You can use it independently of the mobile phone. The entries are not stored on the SIM card.

The internal phone book gives you various options:

- Dialling phone numbers ⇒ *page 29*
- Storing additional names and phone numbers in the internal phone book ⇒ *page 29*
- Playing the internal phone book ⇒ *page 30*

Names and phone numbers stored in the internal phone book can be selected using the speech control system.

Entering

You should choose spoken names that can be identified clearly by the speech control system.

Numbers from **ZERO** to **NINE** are recognised when you enter a telephone number. The telephone number can be specified all at once, in blocks of digits (separated by a brief pause), or as single digits. After each block of digits you specify (separated by a brief pause) the system will repeat the digits. The system can only recognise single digits (**TWO**, **THREE**, etc.), and not combinations of digits (e.g. twenty-three).

If the telephone number has more than 20 digits, the system will decline and give the cue **<The number is too long>**. A **Plus (+)** can also be placed ahead of the 20 digits.



If the system does not recognise a phone book entry, you can browse through the internal phone book by saying the command **PLAY PHONE BOOK**. Press the talk button as a name is being read to select the entry.

Troubleshooting

Should the system say **<The function is not possible>**, please check the status of the speech control system:

- Is the mobile phone switched on?
- Has the PIN been entered?
- Is the phone book being loaded into the on-board phone system
⇒ page 25? ■

Applies to vehicles: with phone pre-installation and speech control system

Switching the speech control system on and off

The speech control system can be activated via the talk button on the mobile phone adapter or the button on the multi-function steering wheel.*

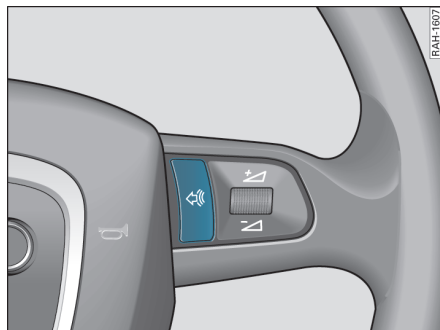 


Fig. 15 Talk button on the multi-function steering wheel

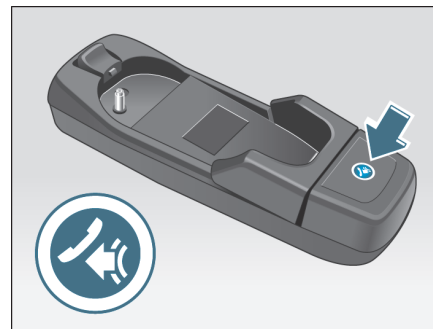 


Fig. 16 Talk button on the mobile phone adapter

Important: The ignition must be switched on and no phone calls must be active.

Switching on the speech control system

- Press the talk button  on the multi-function steering wheel* ⇒ fig. 15, or
- Press the talk button  on the mobile phone adapter ⇒ fig. 16. A signal tone will indicate that the speech control system is ready. **SPEAK** will appear in the display of the driver information system.

Switching off the speech control system

- Press the talk button  on the multi-function steering wheel* ⇒ fig. 15, or
- Press the talk button  on the mobile phone adapter ⇒ fig. 16. ■

Applies to vehicles: with phone pre-installation and speech control system

Commands

The speech control system processes speech commands.

The system confirms acceptance of speech commands verbally and guides you through the dialogue.

Basic functions of the speech control system

To ...	Speak this command:
Enter the mobile phone PIN.	ENTER PIN / ENTER PIN CODE ⇒ page 28
Enter a telephone number you want to dial.	DIAL NUMBER ⇒ page 29
Redial the last selected telephone number.	REDIAL ⇒ page 29

Executing functions

To ...	Speak this command:
Dial a telephone number.	DIAL ⇒ page 29
Store names and telephone numbers in the internal phone book or store a PIN number.	STORE ⇒ page 31
End a dialogue	CANCEL
Repeat a specified name or all of the digits specified up to this point.	REPEAT ⇒ page 29 The system prompts you to <confirm, or specify additional digits?> .
Delete the specified name or the last entered block of digits.	BACK The blocks of digits entered previously will be repeated. The system prompts you to <confirm, or specify additional digits?> .

To ...	Speak this command:
Delete all specified digits.	DELETE The system will then give the cue <The number is deleted. The number, please?> so that you can specify new digits or commands.
Store names along with a telephone number in the internal phone book.	STORE NAME ⇒ page 29
Select a telephone number stored with a name in the internal phone book.	SELECT NAME ⇒ page 30
Delete names from the internal phone book.	DELETE NAME ⇒ page 30, or DELETE PHONE BOOK ⇒ page 30
Play the internal phone book.	PLAY PHONE BOOK ⇒ page 30
Delete the complete internal phone book.	DELETE PHONE BOOK ⇒ page 30

Applies to vehicles: with phone pre-installation and speech control system

Entering a PIN

You can enter the PIN code for your mobile phone using the speech control system.

Important: The speech control system must be switched on ⇒ page 27.

- Give the command **ENTER PIN** or **ENTER PIN CODE**.
- Say the individual digits of your PIN code.
- Say the command **STORE**.

If the PIN code is more than 8 digits long, the system will decline and give the cue **<The PIN is too long>**. If the specified PIN code is incorrect, the system will say **<The PIN is incorrect>**. If the wrong PIN code is entered three times, the SIM card will be blocked. The SIM card can be unblocked with the PUK (personal unblocking key). The unblocking key can only be entered on the mobile phone keypad and not via the speech control system. ■

Applies to vehicles: with phone pre-installation and speech control system

Dialling a number

A telephone number can be specified to the system and then dialled.

Important: The speech control system must be switched on
⇒ *page 27*.

- After the tone, say **DIAL NUMBER** or **SELECT NAME**.
- Say the digits one after the other (single digits only) for the phone number you want to call, or
- Say the recorded name for one of the entries that has been stored in the internal phone book* ⇒ *page 26*.
- After saying the number or name, say **DIAL**. ■

Applies to vehicles: with phone pre-installation and speech control system

Redialling

Important: The speech control system must be switched on
⇒ *page 27*.

- After the tone, say **REDIAL**. The last number dialled using the speech control system will then be redialled.



Note

On some mobile phones, the number you dialled last is placed at the bottom of the list. In this case, the redial function of the speech control system cannot be used. ■

Applies to vehicles: with phone pre-installation and speech control system

Storing names in the phone book

You can store names along with a telephone number in the internal phone book.

Important: The speech control system must be switched on
⇒ *page 27*.

- After the tone, say the command **STORE NAME**.
- When requested by the speech control system, please say the name under which you wish to store the phone book entry.
- When requested by the speech control system, repeat the name.
- When the speech control system gives you the cue, say the digits one after the other (single digits only) for the phone number you want to call.
- Say the command **STORE**.

Say the command **Delete** or **Back** to delete or correct the corresponding block of digits. Say **Repeat** to have all the digits repeated that have been specified up to that point. If two or more names sound alike, it is better to save the names including the first name or some other distinguishing entry. ■

Applies to vehicles: with phone pre-installation and speech control system

Selecting names

Important: The speech control system must be switched on
⇒ page 27.

- After the tone, say the command **SELECT NAME**.
- When the speech control system gives you the cue, say the recorded name you wish to delete (which is stored in the phone book for the speech control system)
⇒ page 29.
- Say the command **DIAL**. The telephone number will be dialled. ■

Applies to vehicles: with phone pre-installation and speech control system

Deleting names from the phone book

You can delete entries from the internal phone book.

Important: The speech control system must be switched on
⇒ page 27.

- After the tone, say the command **DELETE NAME**.
- When the speech control system gives you the cue, say the recorded name you wish to delete (which is stored in the phone book for the speech control system)
⇒ page 29.
- When the speech control system gives you the cue, say **YES** to delete a recorded name which was previously stored in the phone book for the speech control system. This is to confirm that you wish to delete the entry.

Say the command **Repeat**, if you would like to have the specified name repeated by the system. If you then say **No**, the system will answer with **<Cancel>** and the dialogue will be ended. ■

Applies to vehicles: with phone pre-installation and speech control system

Playing the phone book

You can have the entries stored in the internal phone book read out to you.

Important: The speech control system must be switched on
⇒ page 27.

- After the tone, say the command **PLAY PHONE BOOK**. The system will read out the entries included in the phone book for the speech control system.
- To dial a telephone number, press the talk button on the multi-function steering wheel or the talk button on the mobile phone adapter while the entry is being read. ■

Applies to vehicles: with phone pre-installation and speech control system

Deleting the phone book

You can delete the entire phone book or just single entries.

Important: The speech control system must be switched on
⇒ page 27.

To delete the complete phone book for the speech control system:

- After the tone, say the command **DELETE PHONE BOOK**.
- Say **YES**, when the speech control system gives you the cue.



- When the speech control system gives you the cue, say **YES** again to delete the complete phone book for the speech control system.

To delete an individual recorded name from the phone book:

- After the tone, say the command **DELETE PHONE BOOK**.
- Say **NO**, when the speech control system gives you the cue. The system will read out the entries included in the phone book for the speech control system.
- Press the talk button while the recorded name which you wish to delete is being read out.
- Say **YES**, when the speech control system gives you the cue. The recorded name which was read out will be deleted.



Note

You can continue to delete names from the phone book by pressing the talk button as the entries are being read out. ■

Speech control system for some export markets

Applies to vehicles: with phone pre-installation and multi-function steering wheel

Storing names in the phone book*

If your vehicle is equipped accordingly, you can assign spoken names to the entries from the SIM card or the mobile phone directory.

- Press the **MODE** button on the multi-function steering wheel ⇒ *page 27*, fig. 15.

- Use the left thumbwheel to scroll through the phone book and to select an entry.
- Press the talk button  on the multi-function steering wheel. You will then hear a beep.
- Say the name you wish to save for this entry. You will then hear two beeps.
- Repeat the name. The system will repeat the spoken name and an ascending sequence of tones will confirm that the entry has been accepted.

If the entry has not been accepted, a descending sequence of tones followed by a beep will sound, and you will have to repeat your entry.

When you have stored a spoken name, the display of the driver information system will show an arrow before the entry. This arrow will help you identify the SIM card and mobile phone directory entries to which a spoken name has been assigned.



Note

If two or more names sound alike, it is better to save the names including the first name or some other distinguishing entry. ■

Applies to vehicles: with phone pre-installation and multi-function steering wheel

Selecting names from the phone book*

You can select spoken entries which have been stored in the phone book.

- Press the talk button  on the multi-function steering wheel ⇒ *page 27*, fig. 15. You will then hear a beep.
- Say the name you wish to select. You will then hear two beeps.



You will hear an ascending sequence of tones to confirm that the system has recognised the name. The number for the person you wish to call will then be dialled.

If the system failed to recognise the name, you will hear a descending sequence of tones followed by a beep. Please repeat the name after the beep.

When you have stored a spoken name, the display of the driver information system will show an arrow before the entry. This arrow will help you identify the SIM card and mobile phone directory entries to which a spoken name has been assigned. ■

Applies to vehicles: with phone pre-installation and multi-function steering wheel

Deleting names from the phone book*

You can delete spoken entries which you have stored in the phone book.

- Use the **(MODE)** button on the multi-function steering wheel ⇒ *page 27*, fig. 15 to switch to the telephone function. A phone book entry will appear in the display of the driver information system.
- Use the left thumbwheel to scroll through the phone book and to select an entry marked with a horizontal arrow.
- Press the talk button **(🗨️)**. The spoken name will then be deleted.

When you have deleted a spoken name the arrow in front of the SIM card entry or mobile phone directory entry will also be deleted in the display of the driver information system. ■

Multi-function steering wheel

Applies to vehicles: with multi-function steering wheel

Introduction

You can use the multi-function steering wheel for the simple and efficient operation of selected functions of the radio, CD and telephone.*

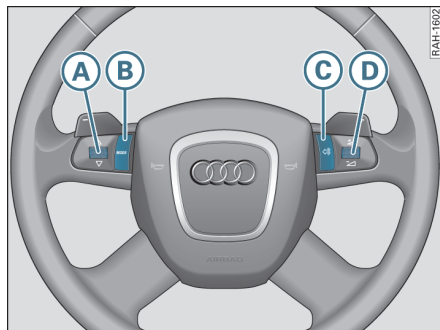 


Fig. 17 Controls on the multi-function steering wheel



Fig. 18 Driver information system

The individual functions are operated by pressing and scrolling the buttons (A) to (D) on the multi-function steering wheel ⇒ fig. 17:

- Press the **[MODE]** button (B) repeatedly to switch between the modes which are then displayed in the driver information system ⇒ fig. 18.
- Scroll and press the left thumbwheel (A) to select a function from one of the menus.
- The speech control system* for the on-board phone system is activated by pressing the talk button (C). Press the talk button again to deactivate the speech control system*.
- Scroll the right thumbwheel (D) up/down to raise/lower the volume as desired. ■

Applies to vehicles: with multi-function steering wheel

Radio mode

Selecting the radio

- Press the **[MODE]** button ⇒ fig. 17 until a station/station name appears in the display of the driver information system.

Changing the station

- Use the left thumbwheel (A) ⇒ fig. 17 to scroll up/down.

Seek

- Press the left thumbwheel (A) once to start the station search.
- Press the left thumbwheel (A) again to stop the station search.



If you hear only a hissing noise when you change stations, the current station number has not been assigned or the selected station is currently not within the reception range. ■

Applies to vehicles: with multi-function steering wheel

CD mode

Selecting CD mode

- Keep pressing the **(MODE)** button ⇒ *page 33*, fig. 17 until a CD track appears in the display of the driver information system.

Next/previous track

- Use the left thumbwheel **(A)** ⇒ *page 33*, fig. 17 to scroll up/down.

Fast forward

- Press and hold the left thumbwheel **(A)** to start the fast forward.
- Release the left thumbwheel again to continue listening to the CD.

Scroll the left thumbwheel up or down several click stops to skip up or down through the tracks. ■

Applies to vehicles: with multi-function steering wheel and phone pre-installation

Telephone mode

Selecting Telephone mode

- Keep pressing the **(MODE)** button ⇒ *page 33*, fig. 17 until a telephone number appears in the display of the driver information system.

Making calls

- Use the left thumbwheel **(A)** ⇒ *page 33*, fig. 17 to scroll up and down through the phone book.
- Press the left thumbwheel **(A)**. The number is dialled and the audio system is muted automatically.

Answering or ending calls

- Press the left thumbwheel **(A)**.

Ignoring telephone calls

- Press and hold the left thumbwheel **(A)**.

Replacing a call

- If a second call is received (call waiting), briefly press the left thumbwheel **(A)**. The first (current) call will be ended and you will be connected with the second caller.

The driver information system displays the following telephone status messages:

PLEASE WAIT...	The SIM card memory is being scanned.
INSERT CARD	There is no SIM card in the mobile phone.
ENTER PIN CODE	The PIN code has not yet been entered.
NO SERVICE	No network connection

CALL	A call is active or incoming. If the caller's telephone number is available, the display will alternately give the caller's number and the message CALL .
NUMBER BUSY	Number dialled is engaged.
TELEPHONE OFF	The telephone is switched off.
CALLING	Establishing a connection.
NO PHONE NUMBERS	The phone book has no entries.

Phone numbers can be stored in different categories in the mobile phone directory. These categories are displayed as follows:

- P Private phone number
- W Work phone number
- M Mobile phone number

Roll the left thumbwheel downwards to scroll down the list of stored names from **A to Z**. Roll the left thumbwheel upwards to scroll up the list of stored names from **Z to A**. If you "flick" the left thumbwheel you can jump to the next letter of the alphabet (e.g. from names beginning with C to names beginning with D, etc.).



Note

The information displayed in the driver information system depends on the type of mobile phone used. ■

Index

A

Alternative frequency	10
AS (Autostore)	9
AudioPilot	8
AUX	20

B

BALANCE	7
BASS	7
Bluetooth	
Connecting to mobile phone	23
BROWSE	18

C

CD changer (external)	15
Ejecting CDs	16
Loading CDs	15
CD changer (internal)	13
Ejecting CDs	14
Loading CDs	13
CD ERR	16
CD fast forward	19
CD mode, notes	16
CD rewind	19
CHECK CD	16
Cleaning and care	6
Commands (mobile phone)	28

D

Display	
Cleaning and care	6

E

ERROR	16
EXT. SOURCE	20
External audio source	20

F

FADER	7
Frequency	9

G

GALA	7
------------	---

I

INFO	13
Internal phone book	26
Deleting names	30
Deleting the phone book	30
Playing the phone book	30
Selecting names	30
Storing names	29

M

Media drives	
Care and cleaning	16
CD changer (external)	15
CD changer (internal)	13
Cleaning and care	6
Memory	9
MIDDLE	7
Mobile phone adapter	
Inserting phone	22
Removing and installing	22
Removing phone	22
MP3	13
MP3 CD directory	18
Multi-function steering wheel	
CD mode	34
Radio mode	33
Telephone mode	34
Mute	7

N

Next CD track	19
Notes on the use of CD players	16

O

ON volume	8
On-board phone system	
Phone book	25

P

Phone book	25
Phone pre-installation	
Bluetooth	23
Inserting phone	22
Removing and installing the mobile phone adapter	22
Removing phone	22
PIN code	28
Previous CD track	19

R

Radio mode	9
Random order	19
RDS-AF	10
RDS-REG	10
Recorded traffic announcement	11
Regional stations	10

S

Safety notes	5
SCAN	9, 20
Scanning all the stations	9
Scanning CD tracks	20
Selecting a CD	
in external CD changer	18
in internal CD changer	18
SERVICE	16
Shuffle (MIX)	19

Sound system

Cleaning and care	6
Overview	5
Switching on and off	7

Speech control system

Assigning recorded names	31
Commands	28
Deleting recorded names	32
Dialling a number	29
Entering a PIN	28
Internal phone book	26, 29, 30
Redial	29
Selecting recorded names	31
Switching on and off	27

Storing stations

Switching off

Sound system	7
Speech control system	27

Switching on

Sound system	7
Speech control system	27

T

TIM	11
TIMER	11
Tone	7
TP	10
Traffic announcement	10
Traffic Programme (TP)	10
Traffic safety	5
TREBLE	7
Tuning to a stored station	10

Tuning to an AS station

Tuning to the next station	9
----------------------------------	---

V

VOL-ON	8
Volume	7

W

Waveband	9
----------------	---