 
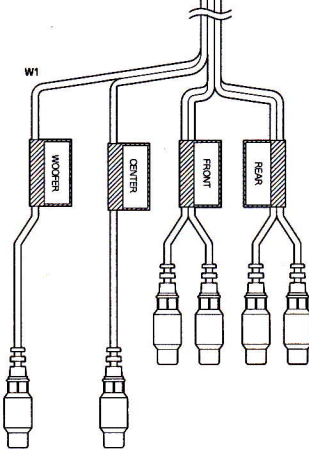 
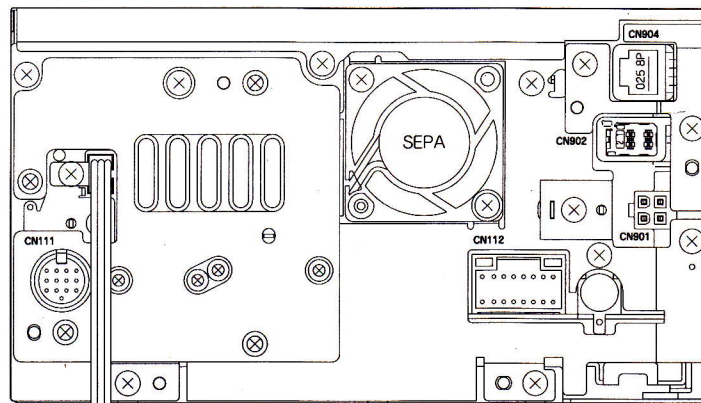 


CONNECTIONS

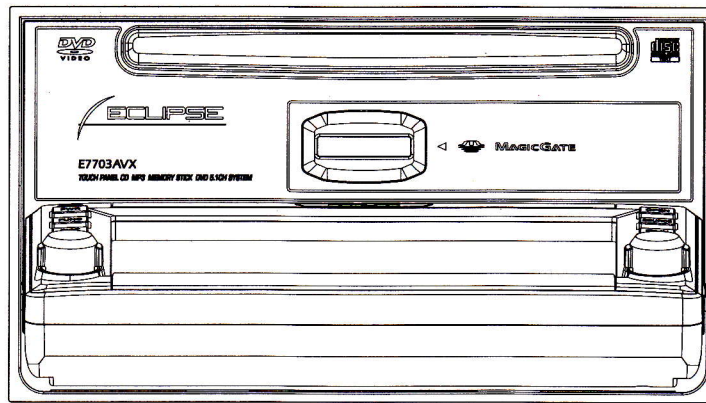

(CD CHANGER)
CN111 (PIN VIEW)

1	REMOTE OUT	OUT
2	BACK UP+B	OUT
3	GND	---
4	ACC+B	OUT
5	R+	IN
6	L-	IN
7	S-GND	---
8	RESET	OUT
9	L+	---
10	BUS+	IN/OUT
11	MUTE	IN
12	BUS-	IN/OUT
13	R-	IN
14	GND	---

(POWER SUPPLY, AUDIO LINE, etc.)
CN112 (PIN VIEW)

1	GND	---
2	BU+B	OUT
3	ACC	OUT
4	LL+B	IN
5	---	---
6	TEL MUTE	IN
7	ANT+B	OUT
8	AMP+B	OUT
9	RR-	OUT
10	RR+	OUT
11	RL+	OUT
12	RL-	OUT
13	FR-	OUT
14	FR+	OUT
15	FL+	OUT
16	FL-	OUT

(TV)
CN901 (PIN VIEW)

1	GND	---
2	GND	---
3	---	---
4	TV-V+	IN

(VISUAL)
CN902 (PIN VIEW)

1	V+	IN
2	CA+	OUT
3	V-	IN
4	GND	---

(NAVI)
CN904 (PIN VIEW)

1	VIDEO-OUT	IN
2	GND	---
3	CAP-V+	IN
4	GND	---
5	NAVI-V+	IN
6	GND	---
7	BACK	IN
8	PARKING	IN

(CM49601D)